

Radius

Inclined platform lift
for curved and variable
sloped stairways

*Travels the inside curvature of the
staircase while allowing for slope
changes*



*Savaria Concord introduces
our new inclined platform lift
for curved stairways. Easily
installed into existing stairs
and suitable for both indoor
and outdoor applications,
the Radius curved stairway
platform is an ideal solution
for barrier-free wheelchair
access in commercial or
residential areas.*



Radius

Inclined platform lift for curved and variable sloped stairways

Features:

- Indoor or outdoor use
- Left or right side configurable
- Choice of 2 motorized safety arm systems : retractable or conventional
- Rails fasten to stanchions mounted on the stair tread
- Pendant type hand control operation
- Choose from 3 standard platform sizes
- Folds to 17" / 430 mm from wall

Options:

- Wall bracket fastening
- Front platform access
- Motorized folding platform
- Folding seat
- Intermediate stops
- Audio and visual movement signals
- Call / send stations
- Handheld programming tool
- Outdoor package

Benefits:

- Quiet operation
- Smooth movement with soft start and stop mechanism
- Programmable curve speed and duration
- Battery operation 24VDC



Choose from conventional motor driven raising safety arms or innovative retractable safety arms that minimize overhead space concerns

Specifications:

Standard platform dimensions	32 x 27.5" 830x700mm	41.3 x 30.3" 1050x770mm	49.2 x 31.4" 1250x800mm
Minimum curved stair width	45" 1130mm	49" 1250mm	52" 1320mm
Alternate platforms available	32 x 25.5" 830 x 650mm	32 x 30.3" 830 x 770mm	41.3 x 27.5" 1050 x 700mm
Stair Angle	Up to 45°		
Capacity	507 lb / 230 kg		
Operating Speed	26'per minute / 8m per minute		
Power supply (battery charger)	115 Volts AC		




Clearances:


Elevation View

Plan View

A:	60 - 118 " 1524 - 2997
C:	67.9 - 102 " 1725 - 2590 mm
N:	59.1 - 75.6 " 1500 - 1920
B:	46.5 - 54.7 " 1180 - 1390 mm
E:	2 " 50 mm

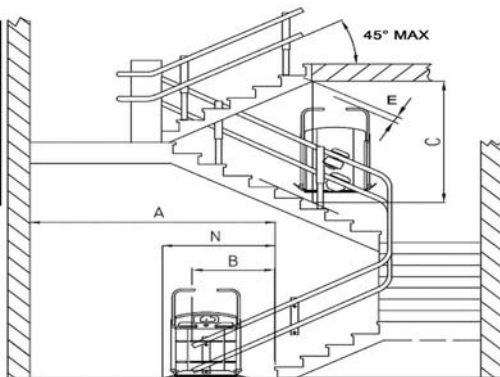

F:	15 - 17.7 " 380 - 450 mm
M:	15.7 - 20.9 " 400 - 530 mm
LS:	37.4 - 57.2 " 950 - 1300 mm

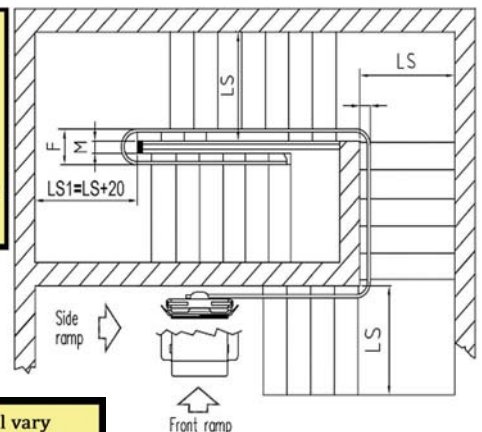

Authorized Savaria Concord Dealer

Exact dimensions will vary based on selections. Please consult your local dealer.

**SAVARIA
CONCORD**

107 Alfred Kuehne Boulevard, Brampton ON Canada L6T 4K3
Tel: 800.661.5112 Fax: 905.791.2222 Website: www.savariaconcord.com

Corporate Partners: **VAN-ACTION**